

Portable Hand Wash Sink & Portable Washing Up Sink



Getting Started

Remove and fill the black jerry can with hot water, replace cap and insert into the insulated jacket.

When ready to use lift the lid and remove the cap, replace the lid and slide on to the bottom shelf of the trolley.

Now feed the clear tube from the tap down through the centre of the middle shelf and into the insulated water cube.



Insert the waste pipe from the sink into the waste water container which can be placed behind or at one end of the unit.



To operate the tap just pull and push the plunger, this will pump water on the up and down movements.

Your unit has been supplied with roll of paper towel, a bottle of anti - bacterial soap and a container to fit on the one end of the unit.

There are two locking wheels fitted to stop the unit from moving, these work best on smooth flat floors.

Catering Equipment



0121-773-2228

clickonstore.net